

CHATLOS (TX) PARTS

CHATLOS (TX)	PSI PART #	DESCRIPTION
033B136-00	12274	VIBRATION HOSE
046B008-00	12291	SET FUSE SUPPLY POWER
050B110-00	12286	MODULE SUPPLY POWER
050B252-00	12298	CARD DUAL COMMUNICATIONS
050B253-00	12297	CARD MONITOR/CONTROL F/740
070B080-00	12199	COMP. OUTPUT FLOW TESTER
100F	12192	TRANSDUCER 100-F
100G1	12186	TRANSDUCER, PRESSURE
100G2	12194	TRANSDUCER 100G2
100G3	12067	TRANSDUCER, PRESSURE
110B013-00	12290	ADAPTER SLAVE UNIT DCE/DCE
150-50	12246	FLOW TRANSDUCER
17063	12154	MONITOR, HUMIDITY, 208VAC *SEE NOTE
2227A453	12285	BRACKET MOUNTING TRANSDUCER
301	12187	AUTOMATIC SHUT-OFF VALVE
3170M16	12171	MOUNTS, SHOCK
3239A2	12000	VALVE SOLENOID
4210A25	12257	FAN VENTILATOR
4210M167	12292	ASSEMBLY CABLE 50' SE/MALE
4210M169	12293	ASSEMBLY CABLE 100' SE/MALE
4210M171	12294	ASSEMBLY CABLE 200' SE/MALE
4210M192	12268	MODULE REFIT KIT
4210M230	12242	POWER CORD
4210M288	12207	POWER CORD
4210M289	12277	COMPRESSOR CORD ASSEMBLY
4210M290	12276	COMPRESSOR CORD ASSEMBLY
4210M31	12243	POWER CORD
4390A15	12003	KIT, SOLENOID VALVE 4-WAY
4390A2	12004	AIR SOLENOID KIT
4390A21	12005	PURGE VALVE 8000/12000
4390A34	12006	VALVE,SOLENOID,4-WAY 208V
4390A34C	12247	COIL 220V
4390A38	12185	REBUILD KIT, SOLENOID VALVE
4390A5	12009	VALVE,SOLENOID,4-WAY 115V
4390A8	12010	SOLENOID VALVE
4390A9	12011	VALVE
4411A1	12202	MASTER SWITCH W/O HEATER ELEMENT
4411A27	12012	POWER SWITCH
4411A36	12210	MAIN POWER SWITCH 220VAC 16A
4412A11	12065	RELAY, ALARM POWER 115V
4412A15	12104	HI-LO PRESS SWITCH 115V
4412A2	12214	RELAY
4412A23	12013	RELAY, ALARM (7P)
4412A31	12249	SOLID STATE RELAY
4412A46	12066	RELAY, ALARM POWER 220V
4412A50	12102	RELAY ALARM 3 PAK/6 PAK
4430A07	12014	SWITCH, HI/LO PRESSURE (G)

CHATLOS (TX) PARTS

CHATLOS (TX)	PSI PART #	DESCRIPTION
4430A10	12156	SWITCH,PRESSURE AIR COMPRESSOR
4430A11	12112	FAN THERMOSTAT
4430A155	12108	SWITCH PRESSURE CK21403
4430A22	12158	PRESURE SWITCH
4430A7	12197	HIGH - LOW PRESSURE SWITCH
4430M172	12107	PRESSURE SWITCH
4432M31-C0	12288	TRANSDUCER FLOW 0-20
4432M31C1	12296	TRANSDUCER FLOW 0-50
4432M32-C0	12289	TRANSDUCER FLOW 0-50
4432M32C1	12295	TRANSDUCER FLOW 0-20
4432M35-C3	12299	TRANSDUCER FLOW 0-20
4430M40B	12259	TH5B HOUSING TRANSDUCER
4441A03	12153	METER MOISTURE PANEL MTG
4443A1	12017	TIMER 115VAC
4443A21	12018	KIT, TIMER 220VAC60C
4443A24	12184	TIMER 220/60
4443A28	12219	HOUR METER
4443A31	12260	HOURLMETER
4443A32	12231	HOUR METER 230V
4443M47	12195	TIMER, 115V 60HZ W/KIT
4443M49	12272	TIMER KIT 220V 50HZ
4513A3	12064	BREAKER, CIRCUIT 10A (3PAK-6PAK)
4520M13	12287	UNIT INTERFACE ALARM UNIVERSAL
4531A7	12071	HUMIDITY CONTROL
4541A19	12020	INSERT, HUMIDITY PLASTIC
4541A20	12021	CABLE, HUMIDITY SENSOR
4541A3	12022	SENSOR, HUMIDITY (BLK BAND-13307)
4541A35C	12229	HUMIDITY CONTROL BOARD
4541A43	12023	MONITOR, HUMIDITY 115VAC
4541A6	12238	SET PLUG
4541A7	12217	HUMIDITY CONTROL
4541M35	12282	DUAL RELAY HUMISTAT
4541M36	12068	HUMIDITY CONTROLLER
4541M44	12024	MONITOR, HUMIDITY 208VAC
4610A4	12213	PILOT LIGHT, ALARM(RED)
4610A7	12267	LAMP WHITE 115 V
4610A8	12220	LAMP RED RND 220VAC
4700A117	12237	CONTROL CARD PCB
5250A13	12063	FAN, 6" DIA, 230VAC
5250A5	12061	4" FAN DIA. 120VAC
5250A9	12093	FAN 220VAC 5000
5260A17	12025	COMPRESSOR, 3/4HP,0-50PSIG,60HZ
5260A21	12026	COMPRESSOR,1/3HP,0-50PSIG,60HZ
5260A59	12090	COMPRESSOR 1/6HP 110V
5261A01	12027	FILTER ASSY. INLET
5261A05	12028	FILTER,ELEMENT (QTY-50)
5261A118	12029	SPOOL, (3/4HP)
5261A14	12030	HEAD,CYLINDER,(1/2&3/4HP)

CHATLOS (TX) PARTS

CHATLOS (TX)	PSI PART #	DESCRIPTION
5261A15	12031	HEAD, CYLINDER(1/6+1/3HP)
5261A21	12032	PLATE, VALVE,(1/2&3/4HP)
5261A26	12033	CYLINDER (1/6+1/3)
5261A27	12189	CYLINDER(1/2,3/4 HP)
5261A30	12076	RING, PISTON
5261A32	12075	SEAL, PISTON
5261A33	12035	ROD,PISTON ASSY.(1/6+1/3)
5261A34	12036	ROD,PISTON ASSY, (1/2&3/4HP)
5261A36	12052	RIDER RING, 3/4 HP
5261A51	12037	FAN BLADE (1/6+1/3HP)
5261A52	12038	FAN BLADE, 1/2&3/4HP
5261A53	12039	SHROUD, FAN (1/6+1/3HP)
5261A54	12040	FAN SHROUD, 1/2 & 3/4HP
5261A65	12041	ECCENTRIC D (3/4HP)
5261A79	12284	START / STOP SWITCH
5350M48	12300	DRYING TOWER
5410A8	12160	VIBRATION ELIMINATOR
5420A01	12096	OUTLET AIR COUPLING 1/2NPT
5420A02	12095	OUTLET AIR COUPLING
5430A2110	12263	SENSOR O-RING
5611A06	12142	LIMITER FLOW 1/4NPT BR 1800SCDF
5611A07	12143	LIMITER FLOW 1/4NPT BR 2500SCFD
5611A5	12141	LIMITER FLOW 1/4NPT BR 1200SCFD
5612A100	12145	MANIFOLD CHECK & HUMID CHAMBER
5612A100-40	12200	CHECK VALVE & HUMIDITY CHAMBER ASSY
5612A100-59	12239	HUMIDITY CHAMBER AND CHECK VALVE
5612A142	12280	CHECK VALVE 81-C
5612A26	12147	MANIFOLD CHECK VALVE
5612A26-40	12279	MANIFOLD CHECK VALVE ASSEMBLY
5612A27	12124	VALVE RELIEF SAFETY
5612A36	12224	SAFTEY VALVE
5612M35	12045	KIT, REPAIR,CHECK VALVE
5612M40	12046	CHECK VALVE REPAIR KIT
5620A1	12047	REGULATOR,PRESSURE OUTLET
5620A10	12098	REGULATOR FRONT PRESSURE 2-30PSIG
5620A30	12159	REGULATOR, PRESSURE/DISCONTINUED
5620A41	12301	BYPASS VALVE
5620A8	12240	BACK PRESSURE REGULATOR
5620M59	12177	BACK PRESSURE REGULATOR
5640A06	12131	GAUGE PRESSURE TANK 0-30PS16
5640A172	12265	SWITCH FLOW 3/6PAK
5640A58	12254	FLOW METER 2400PM
5640A6	12218	OUTPUT PRESSURE GAUGE
5640A8	12133	GAUGE TANK PRESSURE 0-100

CHATLOS (TX) PARTS

CHATLOS (TX)	PSI PART #	DESCRIPTION
5640A90	12172	GAUGE 0-60LBS
5640M11	12271	FLOWMETER
5640M218	12198	PURGE FLOWMETER
C6914	12253	VALVE TESTING TYPE C
G075L	12251	COMPRESSOR, 3/4 HP, 50 PSIG
G1030A	12174	ECCENTRIC AF515A
G526	12183	MAINTENANCE KIT
G528	12054	COMPRESSOR RBLD. KIT 1/3
G-528	12169	COMPRESSOR REBUILD KIT 1/4, 1/3
G-530	12170	COMPRESSOR REBUILD KIT 1/6
G688	12248	FELT FILTER